



Cleaner Pole Location Chart for High Temp Precleaners with V-Tips

Extra Small (SS) V-Tips for Head Pulley Diameters 8" to 15"

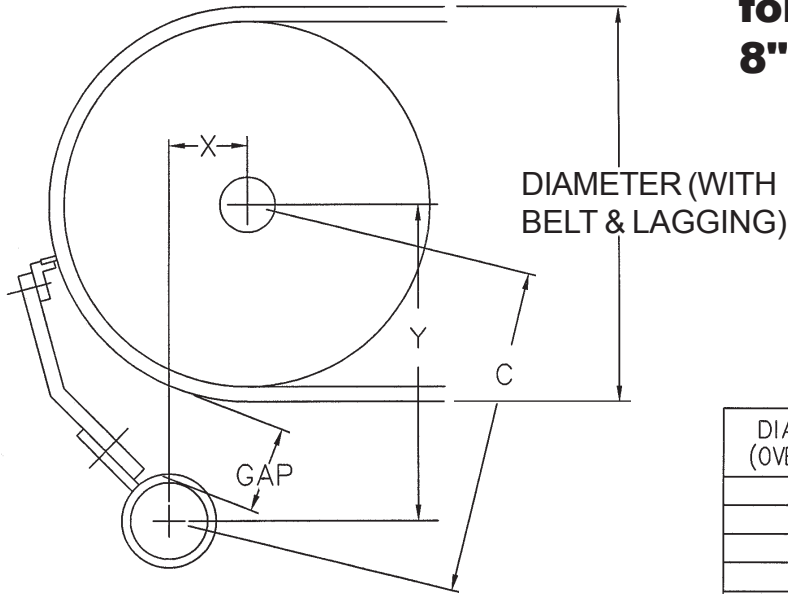

DIAMETER (OVER BELT)	X	Y	C	GAP
8	1	7-3/4	7-3/4	2-5/8
9	1-1/2	7-7/8	8	2-3/8
10	2	8	8-1/4	2-1/8
11	2-1/2	8-1/8	8-1/2	2
12	3	8-1/4	8-3/4	1-3/4
13	3-3/8	8-3/8	9	1-5/8
14	3-7/8	8-1/2	9-3/8	1-1/2
15	4-3/8	8-5/8	9-3/4	1-3/8


Small (S) V-Tips for Head Pulley Diameters 16" to 27"

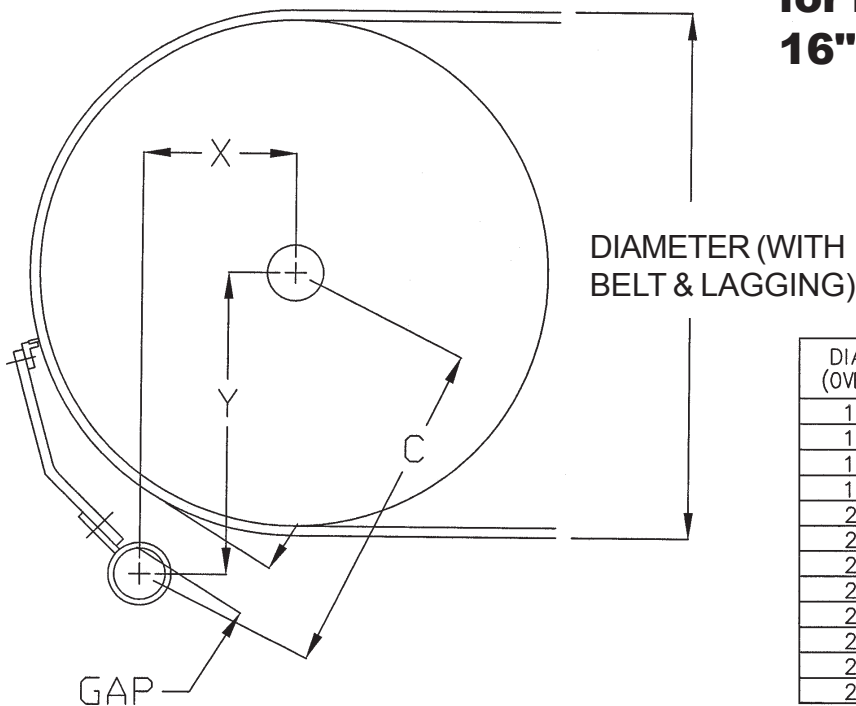

DIAMETER (OVER BELT)	X	Y	C	GAP
16	3-7/8	11	11-5/8	2-5/8
17	4-3/8	11-1/8	11-7/8	2-1/2
18	4-3/4	11-1/4	12-1/4	2-1/4
19	5-1/4	11-3/8	12-1/2	2-1/8
20	5-3/4	11-1/2	12-7/8	2
21	6-1/4	11-5/8	13-1/4	1-7/8
22	6-3/4	11-3/4	13-1/2	1-3/4
23	7-1/4	11-7/8	13-7/8	1-5/8
24	7-3/4	12	14-1/4	1-1/2
25	8-1/4	12-1/8	14-5/8	1-1/2
26	8-5/8	12-1/4	15	1-3/8
27	9-1/8	12-3/8	15-3/8	1-1/4

Cleaner Pole Location Chart for High Temp Precleaners with V-Tips

**Medium (M) V-Tips
for Head Pulley Diameters
28" to 35"**

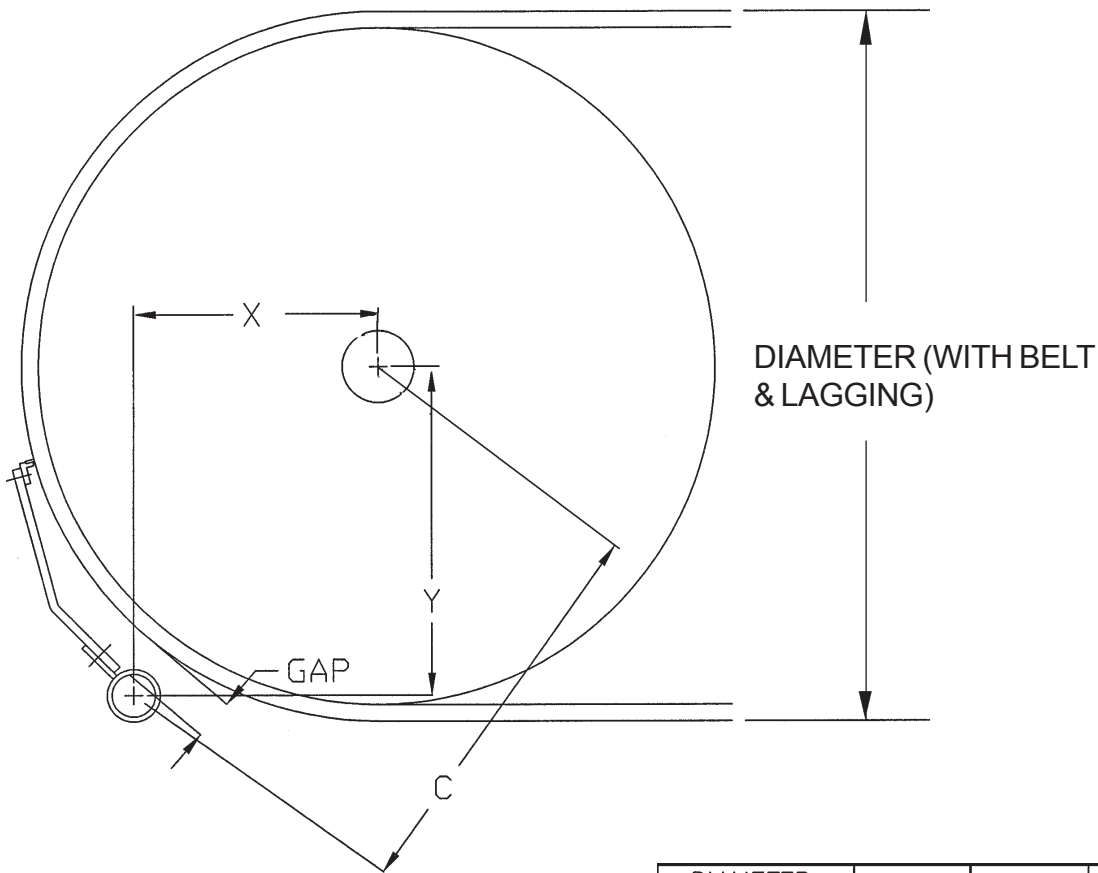

DIAMETER (INCLUDING BELT)	X	Y	C	GAP
28	9	14-1/4	16-7/8	2-1/4
29	9-1/2	14-1/2	17-1/4	2-1/8
30	10	14-5/8	17-5/8	2
31	10-1/2	14-3/4	18-1/8	1-7/8
32	11	14-7/8	18-1/2	1-7/8
33	11-1/2	15	18-7/8	1-3/4
34	12	15-1/8	19-1/4	1-5/8
35	12-3/8	15-1/4	19-5/8	1-5/8



1995 Oak Industrial Dr. NE • Grand Rapids, MI 49505 U.S.A.
Telephone: (616)-459-3196 • Fax: (616)-459-4976 • E-mail: info@flexco.com • Web: www.flexco.com

