

Air Powered Rivet Driver


Assembly /Operation

⚠ WARNING


- Never actuate tool unless Drive Rod is inside Guide Block and contacting a Rivet, personal injury or damage to tool could occur.
- Always use clean, dry, regulated compressed air.
- Do not operate tool with air pressure greater than 90 psi.
- Keep tool clean and dry.
- Lubricate tool with Air Tool Oil daily.

Replacement Parts


1. Air Powered Rivet Driver
2. Retaining Spring
3. Drive Rod with Hold Down Spring and Washer
4. Hold Down Spring and Washer

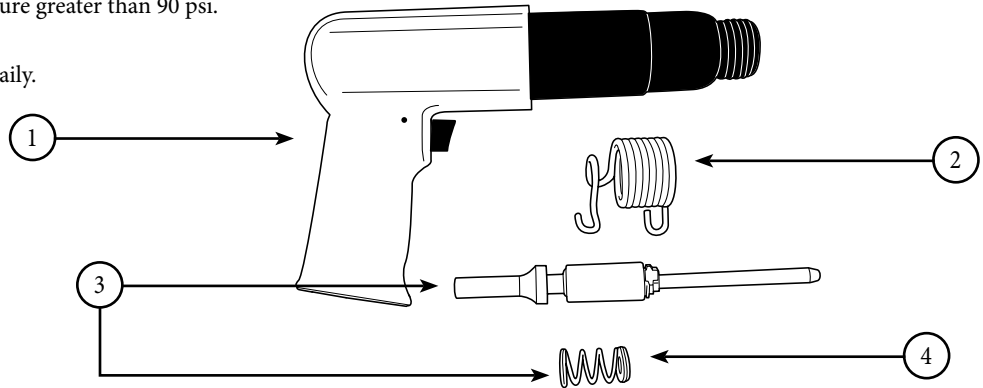


Assembly

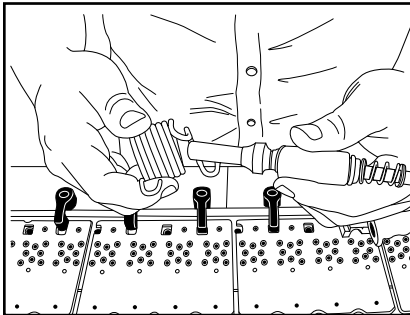

1. Insert Drive Rod into Retainer Spring.

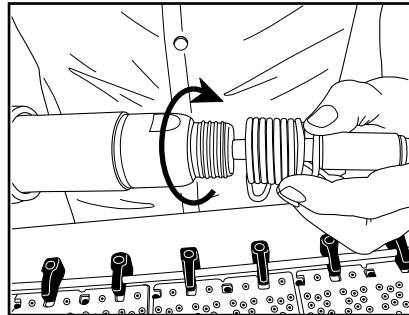


2. Thread Retainer Spring onto nose of Tool.

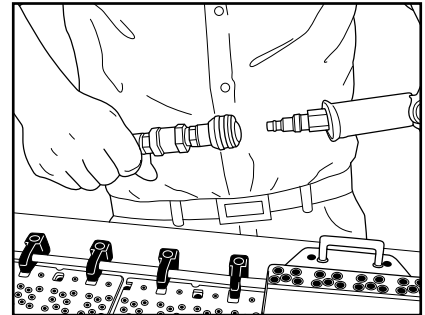


3. Connect Air Supply.


Operation

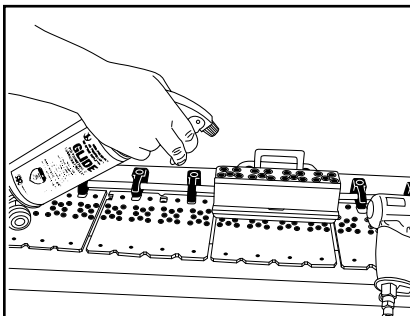

4. Lubricate Guide Block.

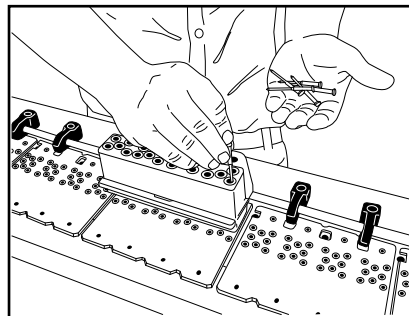


5. Load single Rivets into Guide Block.
If using single rivets skip to Step 7.

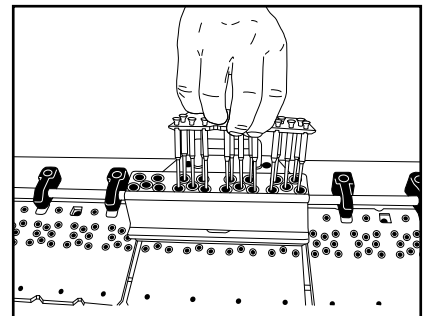


6a. Load Rapid Loader Rivets (if available) into Guide Block.




Operation (cont'd)

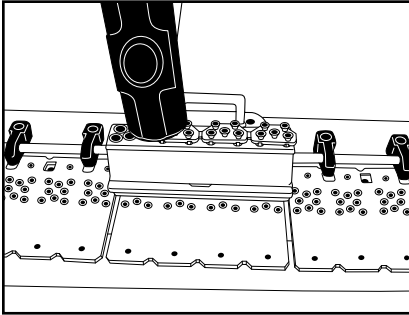


6b. Release Rivets from plastic strip by hammering on top of strip.

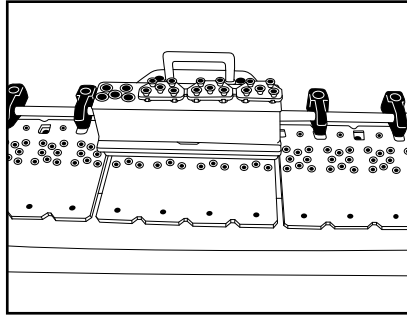

6c. Remove detached plastic strip.

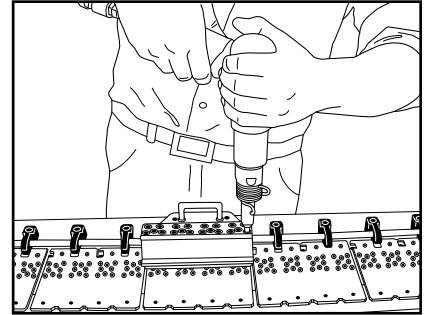

7. Insert Drive Rod into Guide Block.

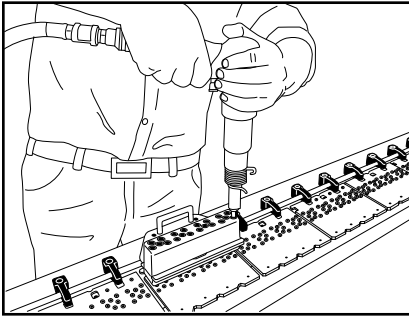

8. Actuate trigger on Tool to drive rivet. Drive Rivet into belt. Do not overdrive.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 U.S.A.
Telephone: 1-630-971-0150 • Fax: 1-630-971-1180 • E-mail: info@flexco.com • Web: www.flexco.com

Australia: 61-2-9680-3322 • China: 86-21-33528388 • England: 44-1274-600-942
Germany: 49-7428-9406-0 • Mexico: 52-55-5674-5326 • South Africa: 27-11-608-4180

©2009 Flexible Steel Lacing Company. 06-09. For Reorder: X2147

